 
 
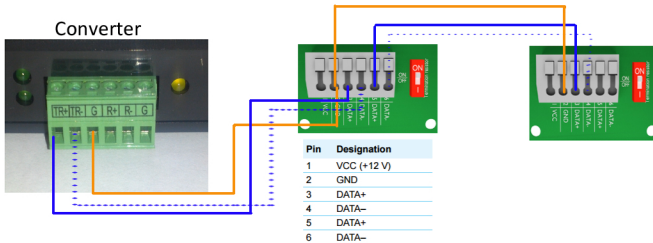 


Delta Inverter


Første Inverter skal have adr.01
ved udskiftning kan man give den adr. 11 så man kan følge hvor mange gange den er skiftede

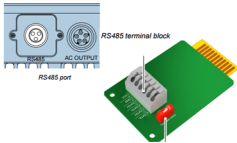

Connecting a single inverter to a datalogger



Connecting multiple inverters to a datalogger

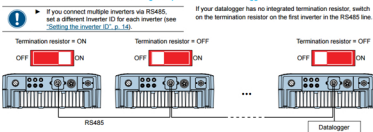

Fremgangsmåde til at sætte id

- When the default information is displayed, press any button to open the main menu.
Otherwise, repeatedly press the button **ESC** until the main menu is displayed.
- Use the buttons **↓** and **↑** to select **Install Settings**.
To confirm your selection, press the button **ENT**.
- The menu is protected by password 5555. Use the buttons **↓** and **↑** to set each digit.
To confirm a digit, press the button **ENT**.
- Use the buttons **↓** and **↑** to select inverter ID.
To confirm your selection, press the button **ENT**.
- Use the buttons **↓** and **↑** to change the value.
To confirm your setting, press the button **ENT**.